


PLAN

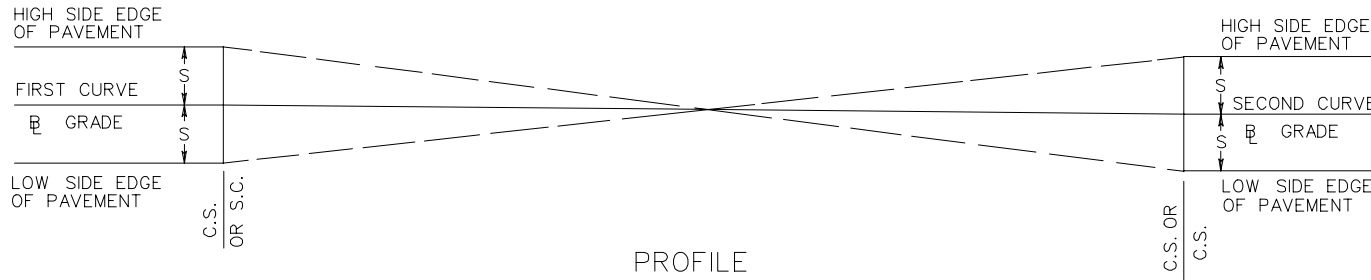

PROFILE

NOTE:

1. COMPUTE STRAIGHT LINE WIDENING AND SUPERELEVATION TRANSITION FROM MAXIMUM OF FIRST CURVE TO MAXIMUM OF SECOND CURVE.
2. REFER TO CHAPTER 3 OF THE AASHTO'S A POLICY ON THE GEOMETRIC DESIGN OF HIGHWAYS AND STREETS FOR ADDITIONAL REVERSE CURVE DESIGN INFORMATION.

METHOD OF APPLYING TC-5.01 ON REVERSE CURVES RURAL CONDITIONS WITH PAVEMENT WIDENING

SPECIFICATION
REFERENCE