



CHORD POINTS (CP) = $\frac{LS}{10}$

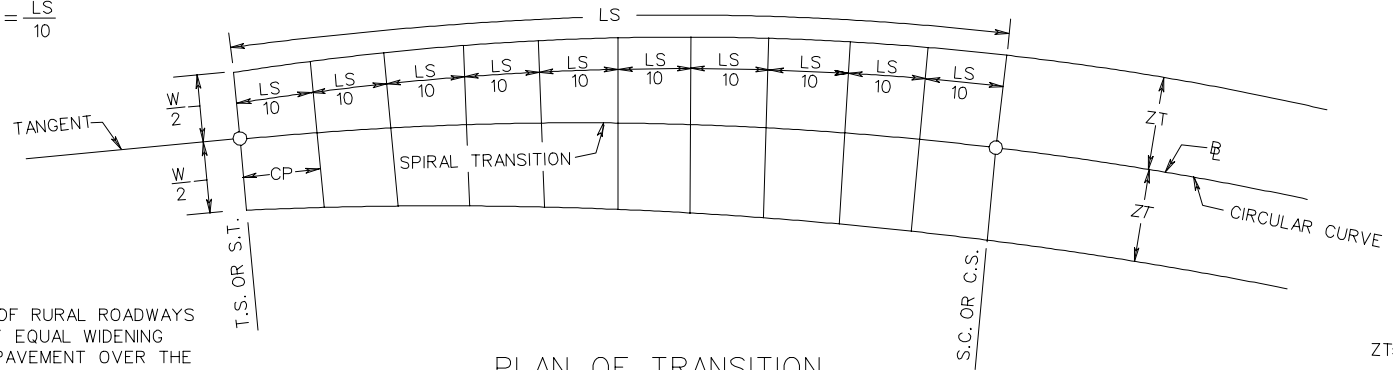


$ZT = \frac{W + w}{2}$

NOTE:
PAVEMENT WIDENING OF RURAL ROADWAYS WILL BE ACHIEVED BY EQUAL WIDENING OF BOTH EDGES OF PAVEMENT OVER THE LS TRANSITION.

NOTE:
ON THE INSIDE OF CURVE THE STANDARD PAVEMENT CROWN (C) SHALL BE HELD UNTIL IT IS EXCEEDED BY THE TABULATED (S) VALUE, THEN THE (S) VALUES SHALL BE APPLIED.

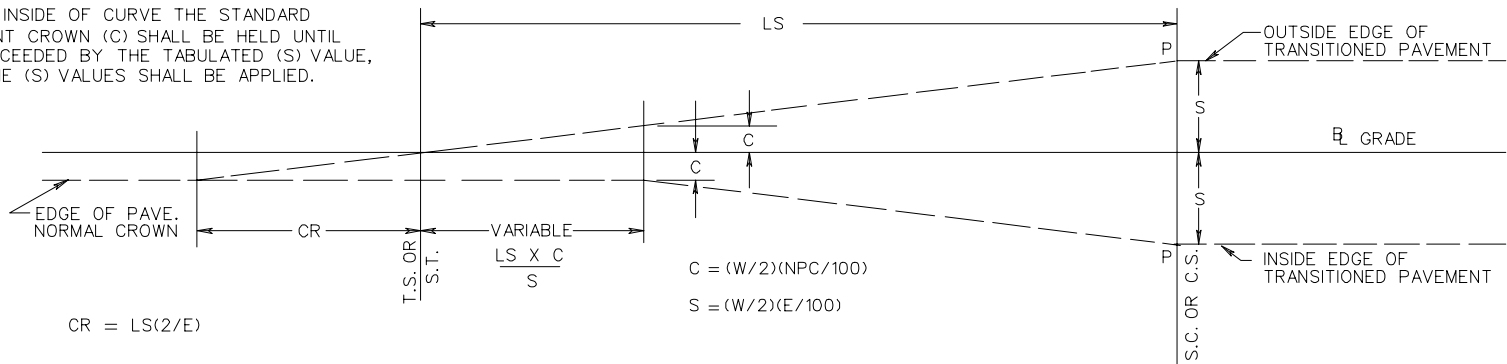

NOTE: SHORT VERTICAL CURVES SHOULD BE INSERTED BY EYE AT POINTS (P) IF CONSIDERED NECESSARY.

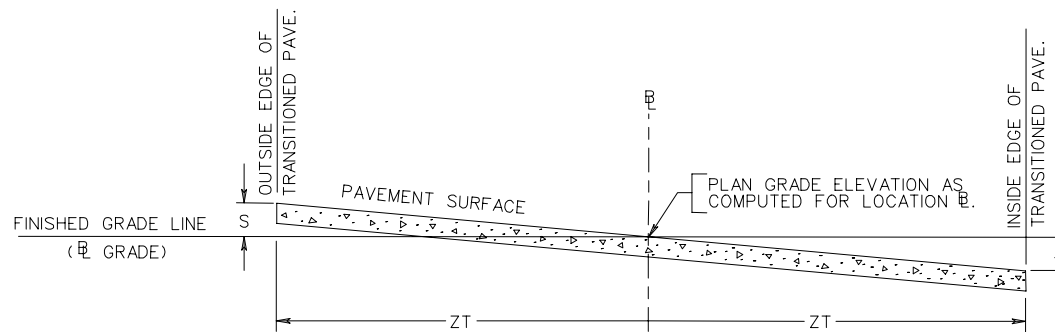

DETAILS FOR TRANSITIONED B
RURAL CONDITION WITH PAVEMENT WIDENING