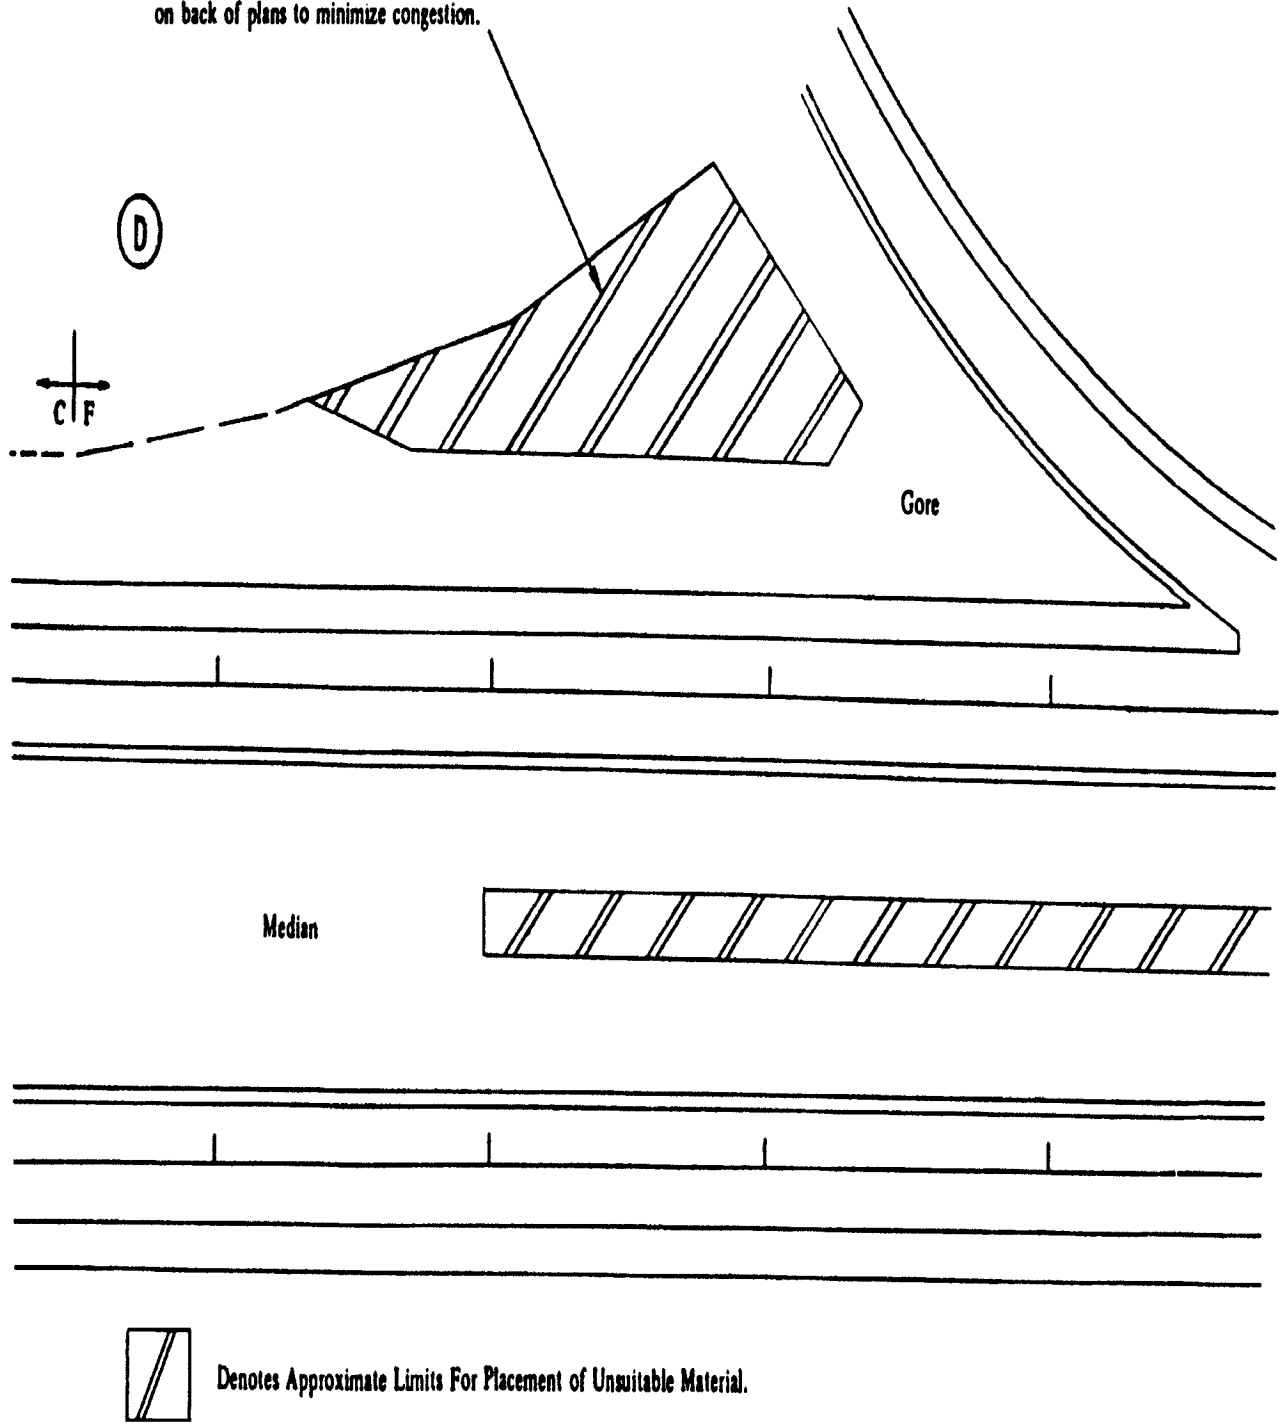


The designated symbol should be shown on back of plans to minimize congestion.



**FIGURE 2E-4 TYPICAL METHOD OF SHOWING PLACEMENT OF UNSUITABLE MATERIAL ON PLANS**