


PLAN

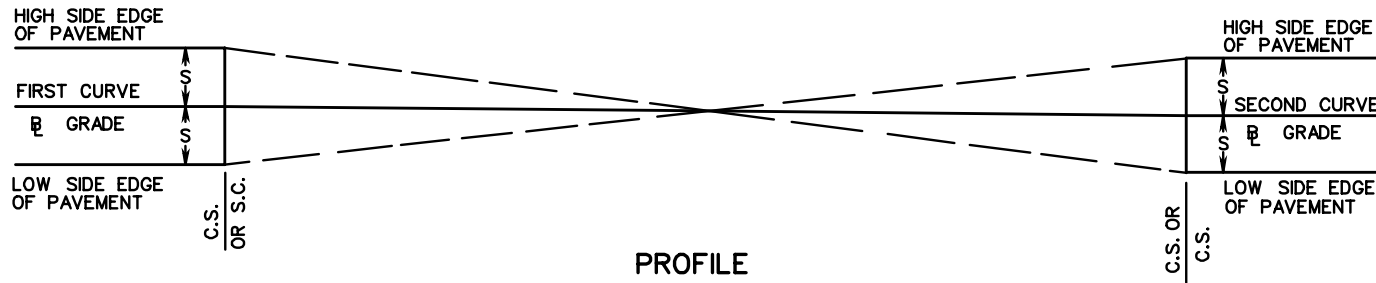

PROFILE

NOTE:

1. COMPUTE STRAIGHT LINE WIDENING AND SUPERELEVATION TRANSITION FROM MAXIMUM OF FIRST CURVE TO MAXIMUM OF SECOND CURVE.
2. REFER TO CHAPTER 3 OF THE AASHTO GREEN BOOK FOR ADDITIONAL REVERSE CURVE DESIGN INFORMATION.

**METHOD OF APPLYING TC-5.01 ON REVERSE CURVES
RURAL CONDITIONS WITH PAVEMENT WIDENING**

SPECIFICATION
REFERENCE