



PLAN

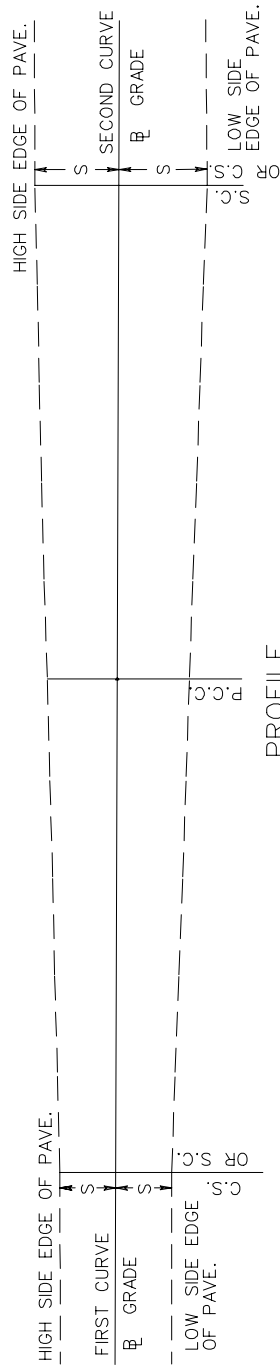


PROFILE

COMPUTE STRAIGHT LINE WIDENING AND SUPERELEVATION TRANSITION FROM MAXIMUM OF FIRST CURVE TO MAXIMUM OF SECOND CURVE.

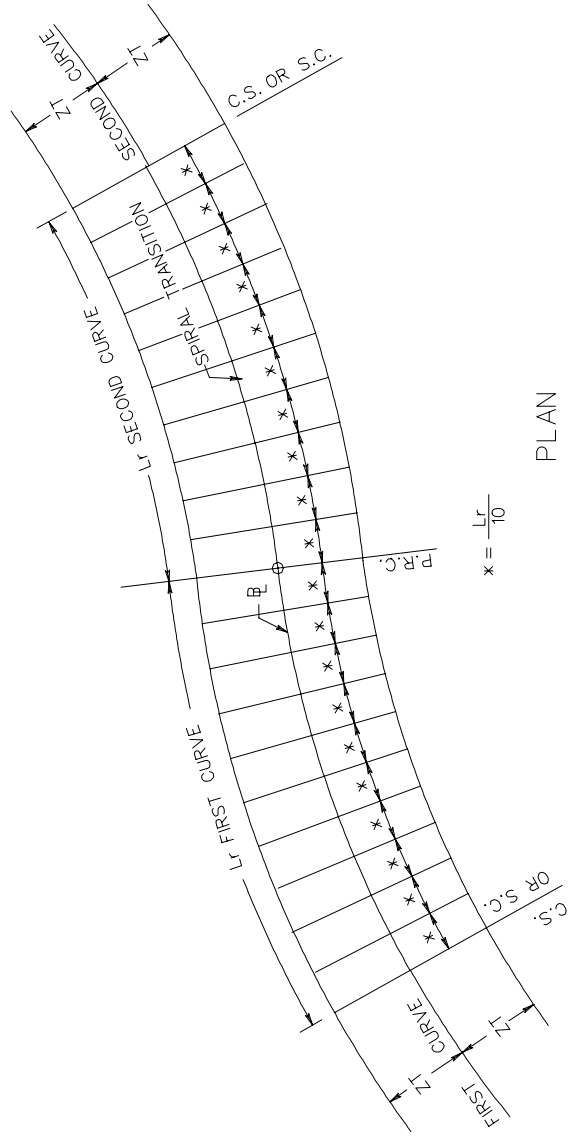

PLAN

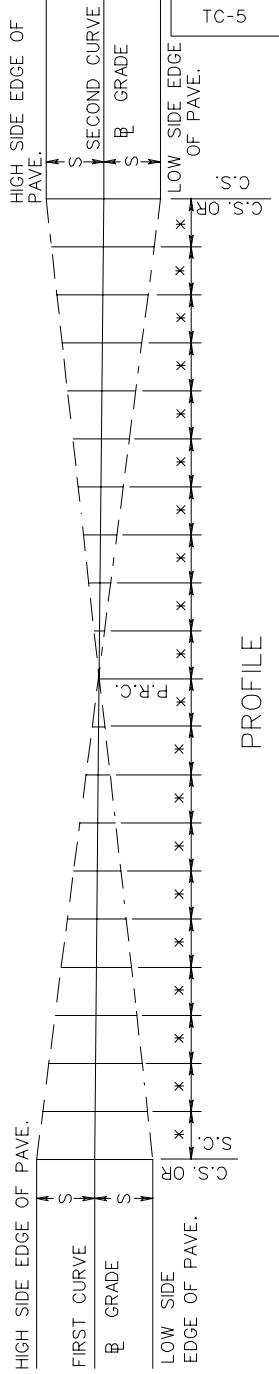

PROFILE

TC-5

METHOD OF APPLYING TC-5 ON COMPOUND AND REVERSE CURVES  
RURAL CONDITION ONLY WITH PAVEMENT WIDENING