

SIGN PANEL DIMENSIONS

ZEE BAR

W	H	C	d	NO.
12'	4'	14"	20"	2
11'	5'	16"	28"	2
10'	6'	12"	4'-0"	2
12'	6'	12"	4'-0"	2
14'	6'	12"	4'-0"	2
16'	6'	12"	4'-0"	2
18'	6'	12"	4'-0"	2
20'	6'	12"	4'-0"	2
22'	6'	12"	4'-0"	2
24'	6'	12"	4'-0"	2
26'	6'	12"	4'-0"	2
28'	6'	12"	4'-0"	2
30'	6'	12"	4'-0"	2
10'	8'	12"	3'-0"	3
12'	8'	12"	3'-0"	3
14'	8'	12"	3'-0"	3
16'	8'	12"	3'-0"	3
18'	8'	12"	3'-0"	3
20'	8'	12"	3'-0"	3
22'	8'	12"	3'-0"	3
24'	8'	12"	3'-0"	3
26'	8'	12"	3'-0"	3
28'	8'	12"	3'-0"	3
30'	8'	12"	3'-0"	3
10'	10'	18"	3'-6"	3
12'	10'	18"	3'-6"	3
14'	10'	18"	3'-6"	3
16'	10'	18"	3'-6"	3
18'	10'	18"	3'-6"	3
20'	10'	18"	3'-6"	3
22'	10'	18"	3'-6"	3
24'	10'	18"	3'-6"	3

SIGN PANEL DIMENSIONS


ZEE BAR

W	H	C	d	NO.
26'	10'	18"	3'-6"	3
28'	10'	18"	3'-6"	3
30'	10'	18"	3'-6"	3
10'	9'	18"	3'-0"	3
12'	9'	18"	3'-0"	3
14'	9'	18"	3'-0"	3
16'	9'	18"	3'-0"	3
18'	9'	18"	3'-0"	3
20'	9'	18"	3'-0"	3
22'	9'	18"	3'-0"	3
24'	9'	18"	3'-0"	3
26'	9'	18"	3'-0"	3
28'	9'	18"	3'-0"	3
30'	9'	18"	3'-0"	3
12'	12'	18"	3'-0"	4
14'	12'	18"	3'-0"	4
16'	12'	18"	3'-0"	4
18'	12'	18"	3'-0"	4
20'	12'	21"	4'-3"	3
22'	12'	21"	4'-3"	3
24'	12'	21"	4'-3"	3
26'	12'	21"	4'-3"	3
28'	12'	21"	4'-3"	3
30'	12'	21"	4'-3"	3
14'	14'	18"	3'-8"	4
16'	14'	18"	3'-8"	4
18'	14'	18"	3'-8"	4
20'	14'	18"	3'-8"	4
22'	14'	18"	3'-8"	4
24'	14'	18"	3'-8"	4
26'	14'	18"	3'-8"	4
28'	14'	18"	3'-8"	4

SIGN PANEL DIMENSIONS

ZEE BAR

W	H	C	d	NO.
30'	14'	18"	3'-8"	4
16'	16'	18"	3'-3"	5
18'	16'	18"	3'-3"	5
20'	16'	18"	3'-3"	5
22'	16'	18"	3'-3"	5
24'	16'	18"	3'-3"	5
26'	16'	18"	3'-3"	5
28'	16'	18"	3'-3"	5
30'	16'	18"	3'-3"	5

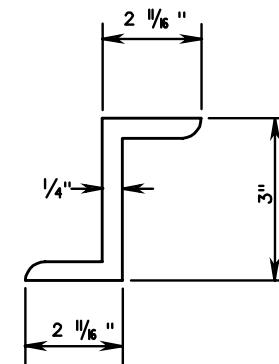

ZEE BAR